# User's Manual

Radar detector Escort Passport Qi45 Euro

In the online store Winauto you also can buy car radar Escort Passport Qi45 Euro . Delivery in Kiev and throughout Ukraine with payment upon receipt!

# http://winauto.ua

Car Receivers - Facia Plates - Head Units - TV and Monitors - Car Antennas - Car Audio - Car DVRs - GPS Navigation - Trip Computers - Security Systems - Mechanical Locking - Car Park Systems - Cameras - Optic and Light - Car Tuning - Car Heating - Marine Audio and Electronics - Car Accessories - Car Isolation - Car Installation Components - Car Batteries - Liquid and Oil -

Car audio and car goods internet store Winauto



R A D A R • L A S E R • S A F E T Y • D E T E C T O R

Simple. Easy. Installed.




Q U I C K - I N S T A L L E D P R O T E C T I O N

# PASSPORT® Qi45

winauto.ua



ESCORT®

## PASSPORT Qi45 Comes Complete

### Front Radar/Laser Receiver

- Miniature weather-proof Radar/Laser Receiver
- Universal mounting bracket with stainless steel hardware
- Built-in 16 foot shielded cable with water proof connector
- 12 nylon wire ties to secure cable

### Miniature Display Controller

- Display Controller mounts easily to instrument pod, dashboard or console
- Optional hidden display included

### Interface

- Central module connects to switched 12-volt power and ground

### Documentation

- Comprehensive Owner's Manual
- Installation Manual

### Built-in Diagnostics

- Confirms all components are operational
- Fully compatible with Laser Shifters



## ▶ Read This First

Pl
in
in

Fo
in
fir
sv

**It is strongly recommended that a 12-volt specialist installs your product**

**1**
pr
PA
sy
ex
el
ar
PA

**2**
pr
au
ca
da

**Performance Warning**

To
pe
Ra
Al
th
pl
th
a
w

Car audio and car goods internet store Winauto

# PASSPORT Qi45 Installation Manual

## A Front Radar/Laser Receiver

**1** Determine the best location for the Radar/Laser Receiver.The best location is typically under the bumper, or inside the front grill of the vehicle. For the best performance, install the Receiver horizontally, with a clear "view" of the road.

**2** Using the built-in mounting holes on the Receiver, or the supplied right-angle mounting bracket, mark the hole locations. Drill pilot holes in the vehicle if necessary.

**3** Mount the Receiver using the supplied hardware. (If right-angle mounting bracket is used, secure the Receiver to the right-angle bracket first, then install bracket with Receiver to the vehicle.)

NOTE:
1. Do not drill holes in the receiver itself.
2. Thoroughly investigate location before drilling any holes.
3. Keep all cables away from moving parts, and hot surfaces (radiator, hoses, etc.).
4. Do not splice cable.

## B Receiver Cable

**1** Connect the receiver cable to the receiver.

**2** Route cable through the firewall, and secure with zip-ties (included).

**3** Route receiver cable into the vehicle's interior. If there is not a suitable opening, drill a 13/32" or 7/16" hole.

**4** Pull cable through firewall, and plug connector into the jack labeled "Antenna" on the Interface.

**5** Pull cable through the firewall and seal the hole as needed. Use silicone sealant (not supplied) if necessary.

NOTE:
1. Only drill hole in firewall after thoroughly investigating location first, ensuring no other wires, hoses, etc. will be damaged.
2. Keep all cables away from moving parts, and hot surfaces (radiator, hoses, etc.).
3. Do not splice cable.

## C

**1** Dete
Contro
custom

**2** Rem
the disp

**3** Rout
marked

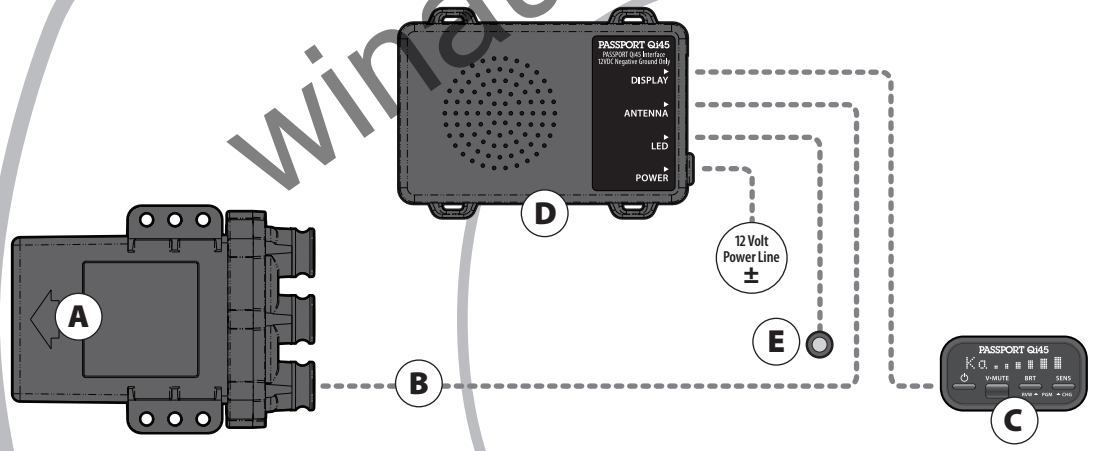


Interior of Vehicle

## D Interface

## E

winauto.ua